

# Duralite Caddy

MODEL # SE600-C

## Installation instructions

### To Prepare

- A. Align the template provided to the bottom of one end of your trunk. You should temporarily tape it in place to avoid slipping.
- B. At the three places noted on template and using a 3/8" drill bit, drill 3 holes into the trunk's sidewall (#1).
- C. From inside the trunk, push the Flange Nuts (#2) through the 2 outer holes. Align the Keyhole Bushings (#4) with small end against trunk, to the Flange Nuts and secure with the 2 Flathead Screws (#5).

### To Attach

Slide the keyhole on the Duralite Caddy (#7) onto the 2 mounted bushings.


### To Secure

Push Carriage Bolt (#6) thru the square hole and secure inside trunk with Wing Nut (#3).

### To Remove

Loosen the Wing Nut and remove the Carriage Bolt (#6). Slide Caddy off trunk.

**HELPFUL HINT** To avoid misplacing the Wing Nut & Bolt, re-attach it to the Duralite Caddy and store inside the trunk.

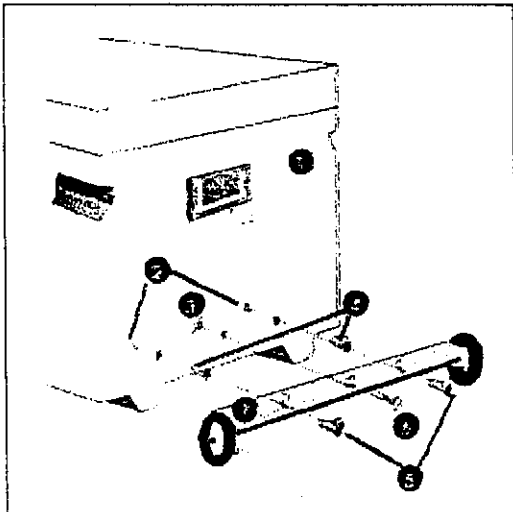

#	QTY.	Description
1.	1	Duralite Trunk
2.	2	5/16"-18x3/8" Flange Nut
3.	1	5/16"-18 Wing Nut
4.	2	Keyhole Bushing
5.	2	5/16"-18x3/4" Flathead Screw
6.	1	5/16"-18x3/4" Carriage Bolt
7.	1	Aluminum Caddy

## DAN'S SADDLERY

A Division of Chem-Tainer Industries

361 Neptune Ave., W. Babylon NY 11704

Toll Free: 800-683-3267 Fax: 631-661-8209

Website: [www.dans-saddlery.com](http://www.dans-saddlery.com)